



AUSFETTI Handheld Cannon User Instructions

PLEASE READ THE FOLLOWING CAREFULLY: IF CONFETTI/STREAMER/COLOUR POWDER LAUNCHER IS MISUSED, ABUSED, OR MODIFIED, AUSFETTI ACCEPTS NO RESPONSIBILITY FOR ANY DAMAGES OR INJURIES CAUSED BY THIS OR THE NEGLIGENCE OF THE USER. PLEASE READ THE FOLLOWING WARNINGS AND INSTRUCTIONS THOROUGHLY AND COMPLETELY PRIOR TO USE:

Firstly, a few warnings to ensure your safety:

- This is **NOT A TOY**, and must be handled by responsible persons at all times. It is not to be used by children.
- This is a single use item only.
- **DO NOT** use damaged cannons.
- **DO NOT** point items directly at people, property, or animals. Aim away from light fixtures and chandeliers.
- Consider wind direction before use.
- Use metallic materials indoors only.
- Consider the environment when using outdoors.
- Ensure arrow is pointed towards intended direction of the effect.
- **DO NOT** transport on a plane.

And here's a rundown on how to use your cannon:

1. Choose your launch location, and consider people, property, animals, and the environment when finding your location.
2. Hold the body of the cannon firmly in your non-dominant hand.
3. Hold the bottom of the cannon firmly with your dominant hand.
4. Ensure the arrow on the cannon is pointing in your intended direction of launch.
5. Aim the cannon towards where you want your confetti/streamers/colour powder to go. Ensure you point the cannon a minimum of 1 metre over the top of audience heads. A good rule of thumb is to point the cannon from vertical to 45 degrees from vertical. This will allow you to get the most out of your cannon.
6. Using your bottom hand, twist the base of the cannon to launch. The cannon will have slight recoil so ensure you are holding on firmly.
7. In the unlikely event that the cannon misfires, do not try to re-use or open the cannon.
8. Please dispose of thoughtfully.

By using the supplied product(s), you acknowledge that AUSFETTI have provided you with written instruction and fully understand the information contained. You accept your responsibility to set-up and use the items safely and that any potential incidents, damages, or injuries caused lies with you, the operator. If the canon has been damaged during transport, do not use. Return to us for a full refund or replacement. Please send photos of the packaging and the damage to hello@ausfetti.com quoting your order number.

Cannon Size	Approximate Distance		
	Confetti	Streamers	Colour Powder
Small	-	-	-
Medium	6m	12m	4m
Large	12m	20m	-

www.ausfetti.com

hello@ausfetti.com

Explosive Enterprises PTY Limited trading as AUSFETTI

15 Hargrave Street Paddington NSW 2021

ABN: 25 603 616 306